


# Pal - 101

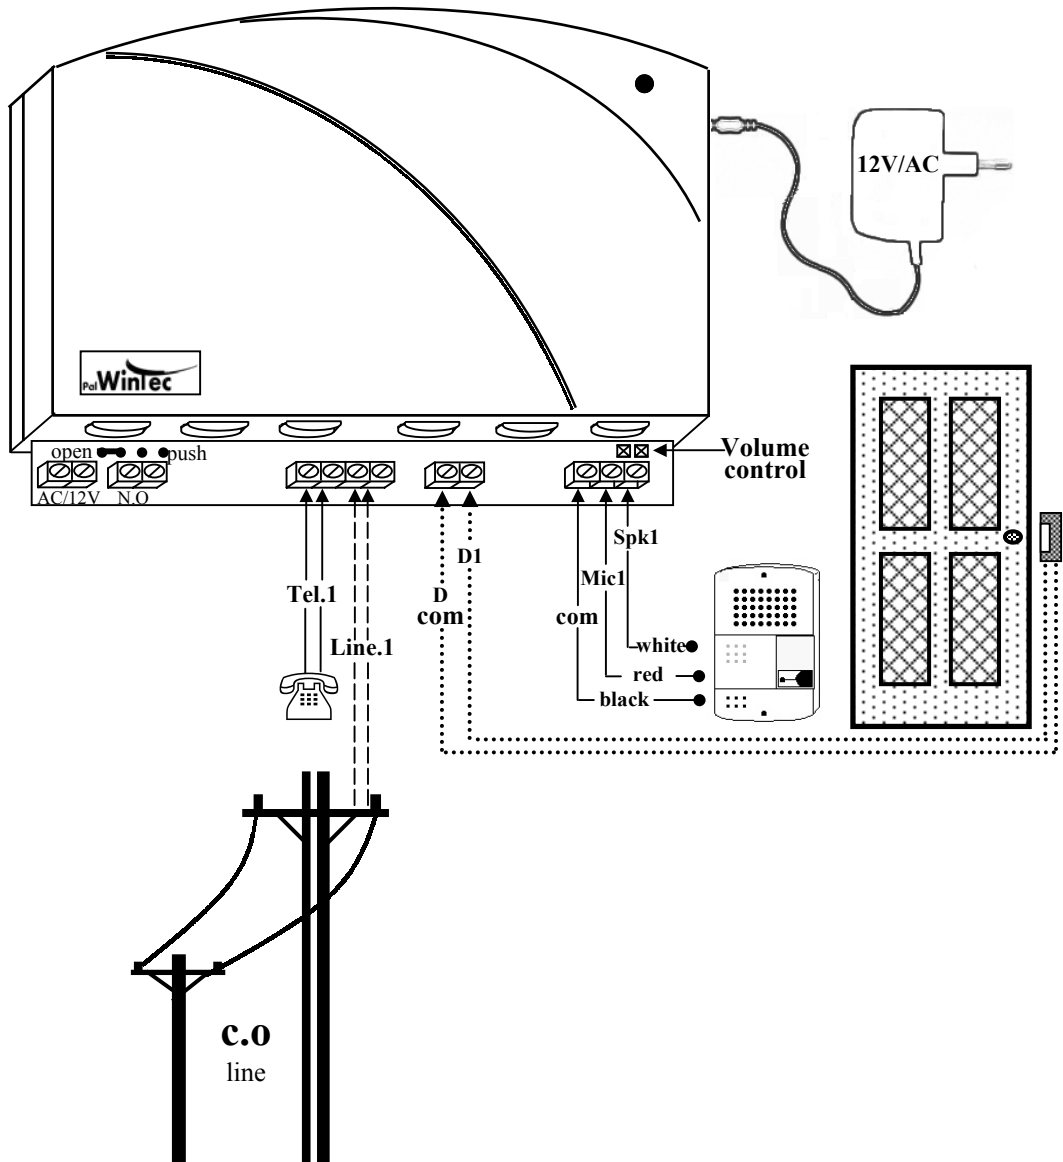

**SPK1** - for connecting speaker in the panel

**MIC1** - for connecting microphone in the panel.

**COM** - for connecting the common

**D1** - for connecting the Doorstrike in door/gate

**D COM** - for connecting the common of both Doorstrike.

**LINE1** - input phone line

**TEL1** - output to the telephones

**N.O** - input for operating by relay control (max:24V/DC/1A or 120V/AC/0.5A)

**Jumpers** : PUSH- Setting in motion a relay by option - during somebody call from the door intercom

OPEN- Setting in motion a relay by option - during opening the door by pressing ( 0 ).